 
 


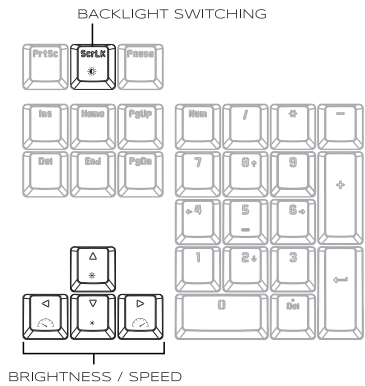

METEOR

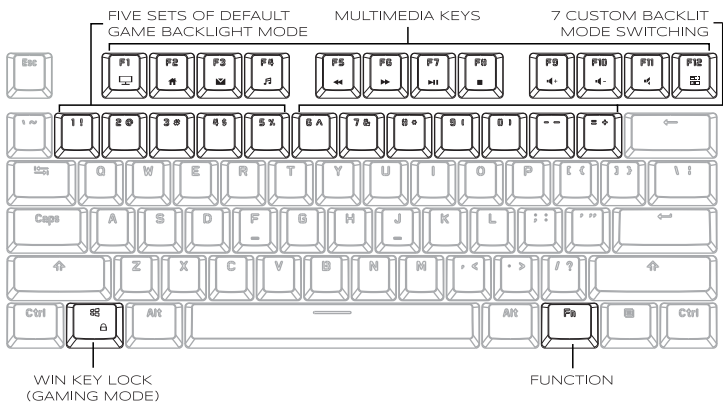

KEY FUNCTION:

Fn + F1 [C]	MY COMPUTER	Fn + F7 [P]	PLAY / PAUSE
Fn + F2 [H]	HOME PAGE	Fn + F8 [S]	STOP
Fn + F3 [M]	EMAIL	Fn + F9 [V+]	VOLUME +
Fn + F4 [M]	MUSIC	Fn + F10 [V-]	VOLUME -
Fn + F5 [P]	PREVIOUS TRACK	Fn + F11 [M]	MUTE
Fn + F6 [N]	NEXT TRACK	Fn + F12 [C]	CALCULATOR
Fn + ESC [E]	LOCK WNDOWS KEY (GAMING MODE)		
Fn + ESC [E]	RESTORE TO FACTORY SETTINGS PRESS FOR 2 SECONDS FOR FULL FACTORY RESET INDICATED BY KEYBOARD BACKLIGHT FLICKING (3 TIMES)		

BACKLIGHT SET:

Fn + ScrLK [F]	BACKLIGHT SWITCHING SUPPORTS MULTIPLE DYNAMIC BACKLIGHT MODES AND CAN BE CYCLED HANDOVER (SPECIFIC LIGHTING EFFECT IS SUBJECT TO MATERIAL OBJECT).
---------------------------------	---

FIVE SETS OF DEFAULT GAME BACKLIGHT MODE:

Fn + 1 !	LOL GAMING BACKLIGHT MODE
Fn + 2 @	FPS GAMING BACKLIGHT MODE
Fn + 3 #	8 KEYS GAMING BACKLIGHT MODE
Fn + 4 \$	33 KEYS GAMING BACKLIGHT MODE
Fn + 5 %	OVERWATCH GAMING BACKLIGHT MODE

Fn + 6 A / 7 B / 8 C / 9 D / 0 E / - = / < > / [] / \ /	7 CUSTOM BACKLIGHT SETTINGS
--	-----------------------------

CUSTOM BACKLIGHT SETTINGS:

Fn + PrtSc [P]	CUSTOM BACKLIGHT SETTING
---------------------------------	--------------------------



SPECIFIC SETTING METHOD:

- PRESS **Fn** + **6 A / 7 B / 8 C / 9 D / 0 E / - = / < > / [] / \ /** TO SELECT A SET OF BACKLIGHT MODE WHICH YOU WOULD LIKE TO EDIT (FOR EXAMPLE: **Fn** + **6 A**).
- PRESS **Fn** + **PrtSc** TO ENTER THE CUSTOM BACKLIGHT SETTINGS (WHEN THE LIGHT OF **PrtSc** START TO BLINK).
- PRESS THE KEYS THAT NEEDS TO SET THE BACKLIGHT, REPEAT THIS STEP AND COMPLETE OTHER KEY BACKLIGHT SETTINGS.
- PRESS **Fn** + **PrtSc** AGAIN TO SAVE AND EXIT.

Fn + Δ *	BACKLIGHT LUMINANCE BRIGHTNESS +
Fn + ▽ *	BACKLIGHT LUMINANCE BRIGHTNESS -
Fn + Δ *	BACKLIGHT SPEED +
Fn + ▽ *	BACKLIGHT SPEED -



  METEOR

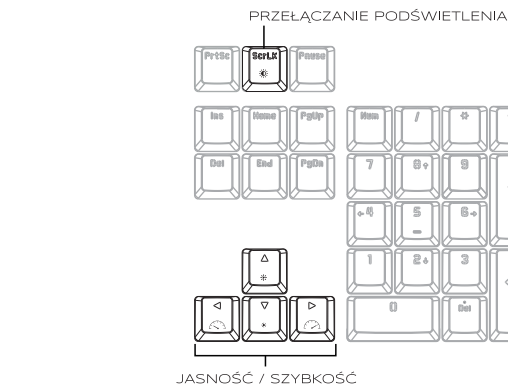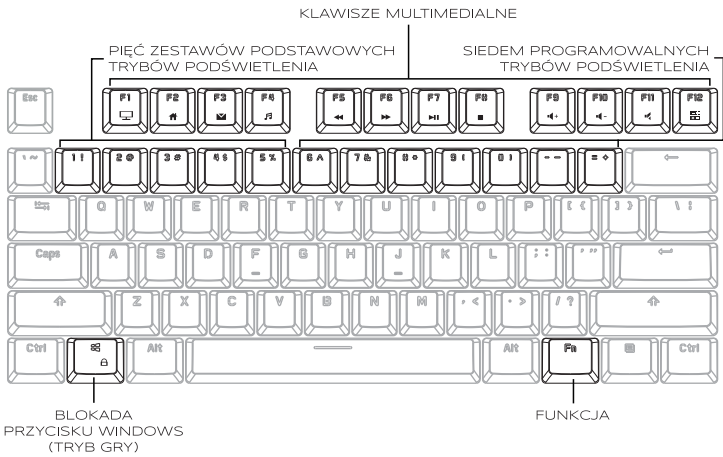

KLAWISZE FUNKCYJNE:

Fn + F1 [C]	MÓJ KOMPUTER	Fn + F7 [P]	ODTWARZANIE / PAUZA
Fn + F2 [H]	STRONA GŁÓWNA	Fn + F8 [S]	STOP
Fn + F3 [M]	EMAIL	Fn + F9 [V+]	DŹWIĘK +
Fn + F4 [M]	MUZYKA	Fn + F10 [V-]	DŹWIĘK -
Fn + F5 [P]	POPZEDNI UTWÓR	Fn + F11 [M]	WYCISZ
Fn + F6 [N]	NASTĘPNY UTWÓR	Fn + F12 [C]	KALKULATOR
Fn + ESC [E]	ZABLOKUJ PRZYCIISK WINDOWS (TRYB GRACZA)		
Fn + ESC [E]	POWRÓT DO USTAWIEŃ FABRYCZNYCH NACIŚNIJ PRZEZ 2 SEKUNDY ABY ZRESETOWAĆ DO USTAWIEŃ FABRYCZNYCH. UDANY RESET BĘDZIE SYGNALIZOWANY 3-KROTNYM MRUGNIĘCIEM PODŚWIETLENIA		

USTAWIENIA PODŚWIETLENIA:

Fn + ScrLK [F]	PRZEŁĄCZANIE PODŚWIETLENIA KLAWIATURA OBSŁUGUJE WIELE TRYBÓW DYNAMICZNEGO PODŚWIETLENIA, KTÓRE PRZEŁĄCZANE SĄ PO KOLEI
---------------------------------	---

PIĘĆ ZESTAWÓW PODSTAWOWYCH TRYBÓW PODŚWIETLENIA:

Fn + 1 !	PODŚWIETLENIE DO GRY LOL
Fn + 2 @	PODŚWIETLENIE DO GRY FPS
Fn + 3 #	PODŚWIETLENIE 8 KLAWISZY
Fn + 4 \$	PODŚWIETLENIE 33 KLAWISZY
Fn + 5 %	PODŚWIETLENIE DO GRY OVERWATCH

Fn + 6 A / 7 B / 8 C / 9 D / 0 E / - = / < > / [] / \ /	SIEDM PROGRAMOWALNYCH TRYBÓW PODŚWIETLENIA
--	--


PROGRAMOWALNE TRYBY PODŚWIETLENIA:

Fn + PrtSc [P]	USTAWIENIA PROGRAMOWALNEGO PODŚWIETLENIA
---------------------------------	--

ZMIANA USTAWIEŃ:

- NACIŚNIJ **Fn** + **6 A / 7 B / 8 C / 9 D / 0 E / - = / < > / [] / \ /** ABY WYBRAĆ TRYB PODŚWIETLENIA KTÓRY CHCESZ EDYTOWAĆ (NA PRZYKŁAD: **Fn** + **6 A**).
- NACIŚNIJ **Fn** + **PrtSc** ABY WEJŚĆ W TRYB PROGRAMOWANIA PODŚWIETLENIA (PRZYCIISK **PrtSc** ZACZNIE MIGAĆ).
- NACIŚNIJ PRZYCIISKI, KTÓRE MAJĄ ZMIEŃĆ PODŚWIETLENIE. POWTÓRZ TEN KROK NA INNYCH KLAWISZACH, KTÓRYCH USTAWIENIE CHCESZ ZMIEŃĆ.
- NACIŚNIJ **Fn** + **PrtSc** RAZ JESZCZE ABY ZAPISAĆ I WYJŚĆ Z TRYBU ZMIANY USTAWIEŃ.

Fn + Δ *	ZMIANA JASNOŚCI PODŚWIETLENIA +
Fn + ▽ *	ZMIANA JASNOŚCI PODŚWIETLENIA -
Fn + Δ *	ZMIANA SZYBKOŚCI PODŚWIETLENIA +
Fn + ▽ *	ZMIANA SZYBKOŚCI PODŚWIETLENIA -

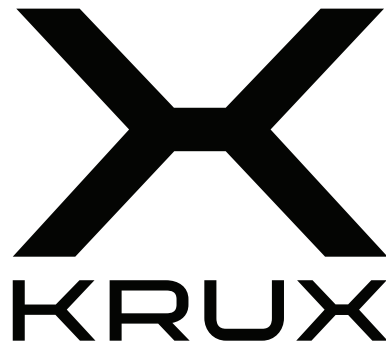 

METEOR



METEOR