


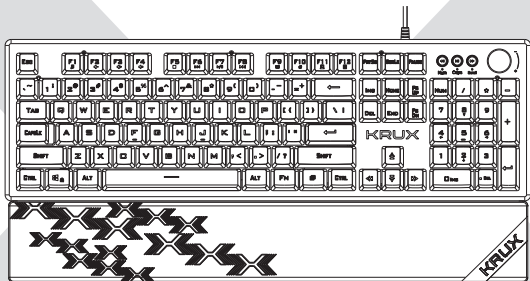

# FROST RGB GAMING KEYBOARD

ENG



ENTITY RESPONSIBLE /  
FOODMOT ODPORWIEDZIALNY:  
COOLING.PL ZDZIECH SP.J.  
UL. SOKOLOWSKA 24  
05-806 SOKOLOW, POLAND  
TEL: +48 22 292 01 30  
BDD: 000020025  
MADE IN CHINA

KRX0101

WWW.KRUX.TECH

2021-07-06

## MULTIMEDIA KEY FUNCTIONS:

- FN + F1 MUSIC
- FN + F7 PLAY / PAUSE
- FN + F2 VOLUME -
- FN + F8 NEXT TRACK
- FN + F3 VOLUME +
- FN + F9 E-MAIL
- FN + F4 MUTE
- FN + F10 HOME PAGE
- FN + F5 PLAY / STOP
- FN + F11 MY COMPUTER
- FN + F6 PREVIOUS TRACK
- FN + F12 CALCULATOR
- FN + ESC RESTORE TO FACTORY SETTINGS
- FN + Lock Windows Key (Gaming Mode)
- FN + W ARROW KEYS AND WSAD FUNCTION SWAP

## BACKLIGHT SET:

- FN + Backlight Speed -
- FN + Backlight Speed +
- TURN THE KNOB CLOCKWISE TO INCREASE BACKLIGHT BRIGHTNESS
- TURN THE KNOB COUNTERCLOCKWISE TO LOWER BACKLIGHT BRIGHTNESS
- SHORT PRESS THE KNOB TO SWITCHING BACKLIGHT MODE (BREATHING, BOUNCING AND FULL BACKLIGHT MODE)

## KNOB FUNCTION:

- ⏮ PRESS THIS BUTTON TO RETURN TO THE PREVIOUS MUSIC
- ⏸ PRESS THIS BUTTON TO PAUSE / PLAY MUSIC
- ⏭ PRESS THIS BUTTON TO ENTER TO THE NEXT MUSIC
- ⏵ LONG PRESS THE KNOB TO SWITCH GAME MODE AND MULTIMEDIA MODE. NUM LOCK LED / CAPS LOCK LED / SCROLL LED FLASH TOGETHER WHEN SWITCH MODE.
- ⌚ TURN THE KNOB CLOCKWISE TO INCREASE THE VOLUME
- ⌚ TURN THE KNOB COUNTERCLOCKWISE TO LOWER THE VOLUME
- ⏶ SHORT PRESS THE KNOB TO MUTE

## SOFTWARE:



To download the newest version of dedicated software please visit [www.krux.tech](http://www.krux.tech)


## Use and warranty limitations:

- The product should be used according to it's intended purpose. Incorrect use can damage the product and endanger the life of the user;
- Excessive humidity, dust and other contaminations can result in product damage which is not covered by the warranty;
- Avoid exposure to rapid changes ambient temperature. Should they occur, wait approx. 30 minutes before using the product until temperature is leveled;
- You can find the warranty terms and conditions at <https://krux.tech/>.



# FROST RGB GAMING KEYBOARD

PL

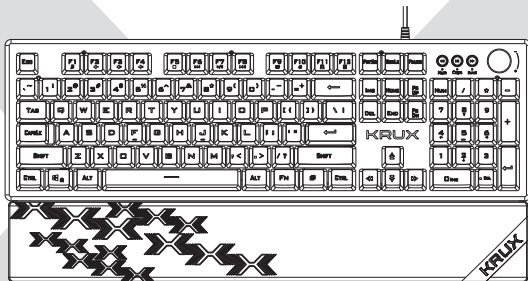

ENTITY RESPONSIBLE /  
PODMIOT ODPOWIEDZIALNY:  
COOLING.PL ZDZIECH SP.J.  
UL. SOKOŁOWSKA 24  
05-806 SOKOŁÓW, POLAND  
TEL. +48 22 292 01 30  
BDO: 000020025  
MADE IN CHINA

KRX0101

WWW.KRUX.TECH

## FUNKCJE MULTIMEDIALNE:

- |  |                |
|--|----------------|
| MUZYKA                                     | PLAY / PAUSE   |
| DŹWIĘK -                                   | NASTĘPNY UTWÓR |
| DŹWIĘK +                                   | E-MAIL         |
| WYCISZ                                     | STRONA GŁÓWNA  |
| PLAY / STOP                                | MÓJ KOMPUTER   |
| POPRZEDNI UTWÓR                            | KALKULATOR     |
| POWRÓT DO USTAWIENÍ FABRYCZNYCH            |                |
| TRYB GRY [BLOKADA SKRÓTÓW WINDOWS]         |                |
| ZAMIANA FUNKCJI PRZYCISKÓW WSAD I STRZAŁEK |                |

## USTAWIENIA PODŚWIETLENIA:

- |  |
|--|
| ZMIANA SZYBKÓŚCI PODŚWIETLANIA -   |
| ZMIANA SZYBKÓŚCI PODŚWIETLANIA +   |
| ZMIANA JASNOŚCI PODŚWIETLENIA +  |
| ZMIANA JASNOŚCI PODŚWIETLENIA -  |
| KRÓTKO NACIŚNIJ POKRĘTŁO, ABY PRZEŁĄCZYĆ TRYBY PODŚWIETLENIA [ODDYCHANIE, ODBIJANIE I PEŁNE PODŚWIETLENIE] |

## FUNKCJE ROLKI:

- |  |   |
|--|---|
|  | NACIŚNIJ TEN PRZYCISK, ABY POWRÓCIĆ DO POPRZEDNIEGO UTWORU  |
|  | NACIŚNIJ TEN PRZYCISK, ABY ZATRZYMAĆ / ODTWARZAĆ MUZYKĘ   |
|  | NACIŚNIJ TEN PRZYCISK, ABY PRZEJŚĆ DO NASTĘPNEGO UTWORU   |
|  | WCIŚNIJ POKRĘTŁO I PRZYTRZYMAJ, ABY PRZEŁĄCZYĆ TRYBY: GRY I MULTIMEDIALNY. DIODA NUM LOCK / DIODA CAPS LOCK / DIODA SCROLL MIGAJĄ RAZEM PRZY PRZEŁĄCZANIU TRYBÓW. |
|  | ODRÓCIĆ POKRĘTŁO W PRAWO, ABY ZWIĘKSZYĆ GŁOŚNOŚĆ  |
|  | ODRÓCIĆ POKRĘTŁO W LEWO, ABY ZMNIJSZYĆ GŁOŚNOŚĆ   |
|  | KRÓTKO NACIŚNIJ POKRĘTŁO, ABY WYCISZYĆ  |

## OPROGRAMOWANIE:



Aby pobrać najnowszą wersję dedykowanego oprogramowania, odwiedź [www.krux.tech](http://www.krux.tech).

## Użytkowanie i wyłączenia gwarancyjne:

- Produkt powinien być używany zgodnie z jego przeznaczeniem, niewłaściwe jego użytkowanie może spowodować uszkodzenie produktu oraz zagrożenie dla zdrowia użytkownika;
- Nadmierna wilgoć, kurz oraz inne zanieczyszczenia mogą spowodować uszkodzenia produktu, które nie są objęte gwarancją;
- Gwarancja nie obejmuje uszkodzeń mechanicznych produktu;
- Należy unikać ekspozycji na radykalne zmiany temperatury otoczenia, w przypadku ich wystąpienia przed użyciem produktu należy poczekać ok. 30 minut na wyrównanie temperatur;
- Szczegółowe warunki gwarancji są dostępne na stronie <https://krux.tech/>.