



**X**  
KRUX


# TREK MAX

KRX0033


[WWW.KRUX.TECH](http://WWW.KRUX.TECH)

## FAN INSTALLATION

OPEN THE LEFT COVER AND REMOVE THE FRONT PANEL

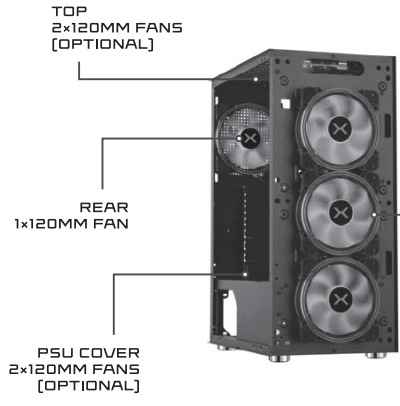

FRONT  
3x120MM FANS  
OR 2x180MM FANS  
[OPTIONAL]

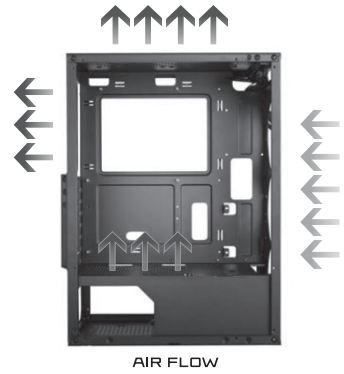

## FANS INSTALLATION ON THE FRONT PANEL




PUT 3x120MM FANS IN FAN LOCATION



FIX FANS WITH SCREWS

## FAN INSTALLATION ON THE REAR

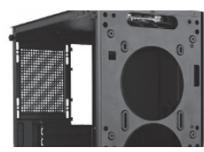

PUT 120MM FAN IN FAN LOCATION



FIX FAN WITH SCREWS

## OPTIONAL FANS INSTALLATION ON THE TOP



PUT 2x120MM FANS IN FAN LOCATION



FIX FANS WITH SCREWS

## OPTIONAL FANS INSTALLATION ON THE PSU COVER



PUT 2x120MM FANS ON THE PSU COVER



FIX FANS WITH SCREWS

## 2.5" SSD INSTALLATION



PUT SSD TO THE LOCATION  
[MAXIMUM 2 x SSD]




FIX SSD WITH SCREWS  
FROM BACK SIDE

## 3.5" HDD INSTALLATION [THERE ARE TWO HDD BRACKETS]



OPEN THE RIGHT SIDE PANEL  
AND PUT HDD TO THE LOCATION  
[MAXIMUM 2 x HDD]

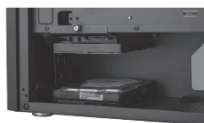

FIX HDD WITH SCREWS


## POWER SUPPLY INSTALLATION




PUT THE POWER SUPPLY  
TO THE PSU LOCATION  
[OPEN THE RIGHT SIDE PANEL FIRSTLY]

PUT THE POWER SUPPLY  
TO THE PSU LOCATION


## HOW TO REMOVE FRONT PANEL

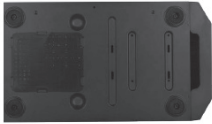


## RGB STRIP LIGHT AND FAN CONNECTION

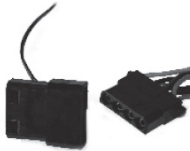

## USB 3.0 INSTALLATION

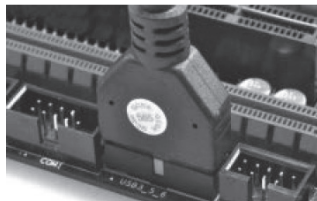

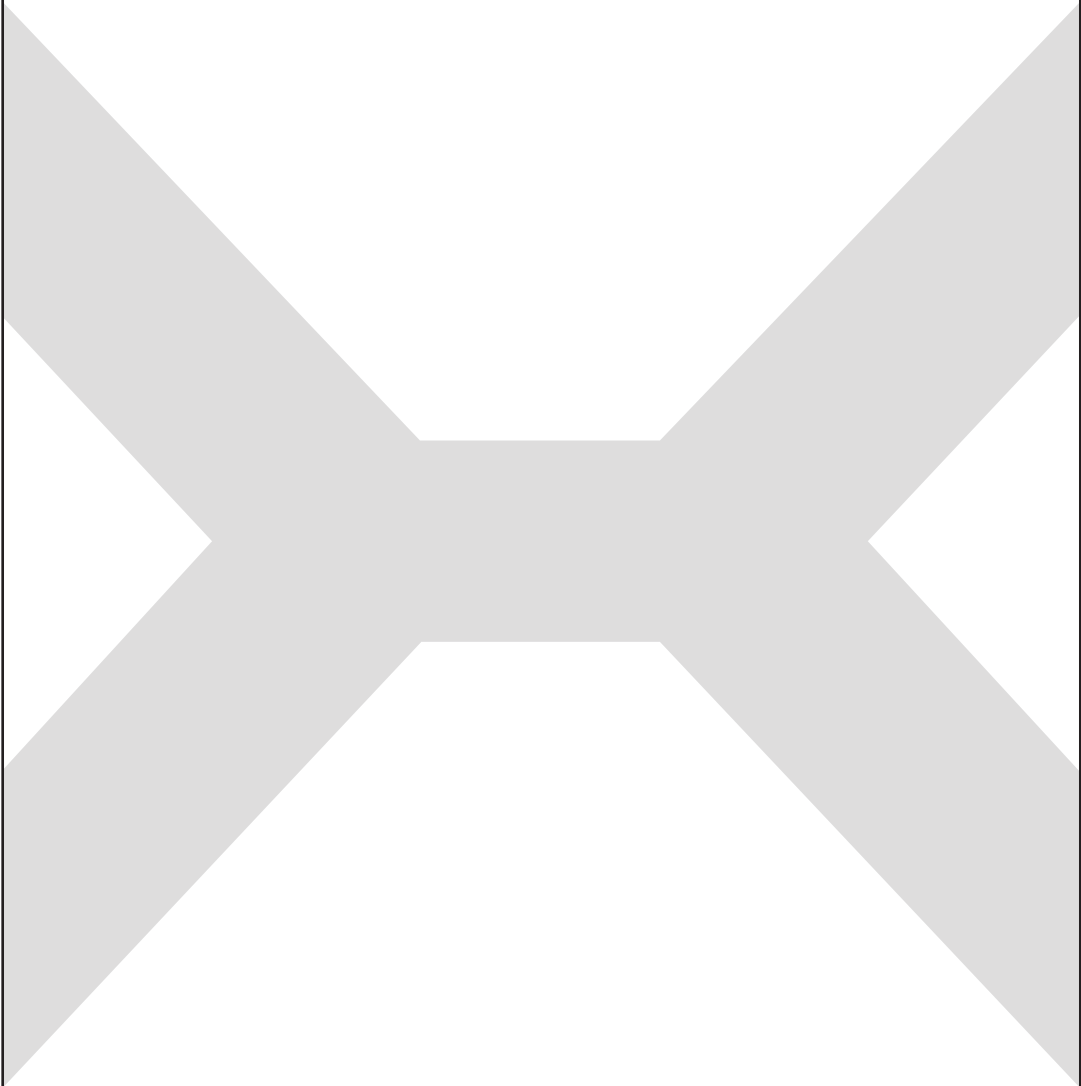

[WWW.KRUX.TECH](http://WWW.KRUX.TECH)